



SP Diagnostics

Innovators & Manufacturers of
Automotive Diagnostics

Tel: 0844 561 7861
Fax: 08700 941753

1415 – VOLVO SERVICE LIGHT RESET TOOL

Please read this information carefully before using your new VOLVO SLR Tool

Thank you for purchasing your updateable VOLVO SLR Tool. We at SP Diagnostics believe that you will have many years of successful business as a result of your investment and it is our aim to ensure that you will remain as up-to-date as possible. Please refer to these instructions when using the tool, if you experience any difficulties then please contact the technical help line on the number below:

TECHNICAL HELP LINE NO. 0844 561 7861

Please register your product with SP Diagnostics by completing the registration card that came with your product. (please remember to affix stamp before posting), you will also be able to register your product on-line by selecting the following link: www.spsupport.com
By registering your product you can take advantage of the following:

- SP Diagnostics product and technical updates via email
 - SP Diagnostics will keep you up to date with new products, special offers and technical information
- Notification of application updates for your new VOLVO SLR Tool
 - Your new VOLVO SLR Tool is now updateable. When updates are available notifications will be sent to all registered users and a posting will be made on the SP Diagnostics support website www.spsupport.com
 - Just post your product to SP Diagnostics Customer Services using the form at the back of these instructions for a low cost update.

Updating your VOLVO SLR Tool

When you receive a notification of an update, please fill in the form attached and return your product together with a cheque for the update fee by recorded delivery using the address on the form.

We are always keen to hear back from customers regarding our products, and what you would like to see included. If you have any specific thoughts, please feel free to contact our Technical Support Help line on **0844 561 7861** and discuss them with the team. Also, don't forget to log in to the **SP Diagnostics Support Forum** where you can share experiences and ask questions to Sykes-Pickavant technical staff and other SP Diagnostics customers. Check the **SP Diagnostics Support** website www.spsupport.com for regular updates and product news.

Training

SP Diagnostics can provide access to several training courses. Please contact customer services on **0845 6016510** for details.

Features:

- Compatible with latest CAN vehicles
- Backwards Compatible with Early Systems
- Includes Volvo UNIPLEX which can be used with ACR Product
- Updateable (return to SP Diagnostics)


VOLVO SLR Functions

Reset Service Light

The NEW Volvo SLR Tool will extinguish the service light on the dashboard after a service has been carried out.

Reset Service Messages

Service Interval Messages displayed on the **Driver Information Module** can also be reset using the NEW Volvo SLR Tool.

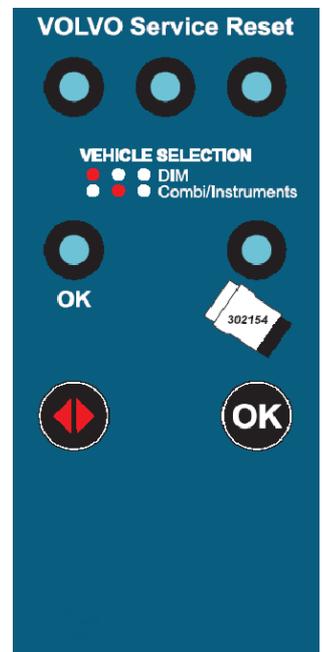

VOLVO SLR Tool - User Instructions



SLR Function Button: Used to select the system required to reset.



SLR Select Button: Used to carry out the selected vehicle reset.



UNIPLEX Requirement Indicator: Indicates if the supplied BLUE UNIPLEX '302154' is required.

Vehicle Set-Up

- i) Ensure vehicle ignition is turned off. Close all doors.
- ii) Using the application list and socket location diagrams, connect the VOLVO SLR tool to the identified diagnostic socket. Use the BLUE UNIPLEX adapter 302154 where required *.
- iii) Turn on the vehicle ignition.

*NOTE

If you use the wrong cable/UNIPLEX combination some of the warning lamps on the dash or system messages on the DIM will appear. Simply check your cable/UNIPLEX selection using the applications list and Switch Ignition '**OFF**' and then back '**ON**' again to turn these lights or messages off. In some cases it may be required that the battery is disconnected for a few minutes to reset the Communication BUS where the wrong system has been selected.

SLR Selection



1. Switch Ignition '**ON**' Close Doors

2. Press '**SLR Function**' button to select the correct system using the applications list.

3. The selected system light will illuminate.

4. If the UNIPLEX is required then the '**UNIPLEX Requirement Indicator**' will illuminate.


5. Press the '**SLR Select Button**' to carry out the selected service light reset.

6. If the process was successful the '**SLR OK**' light will flash quickly.

7. In the event that the process was unsuccessful the selected system light will flash slowly and the '**SLR OK**' light will remain off.

8. After the process has been completed you must Switch the Ignition '**OFF**' and then back '**ON**' again to turn out the Service Light.

Diagnostic Connector locations

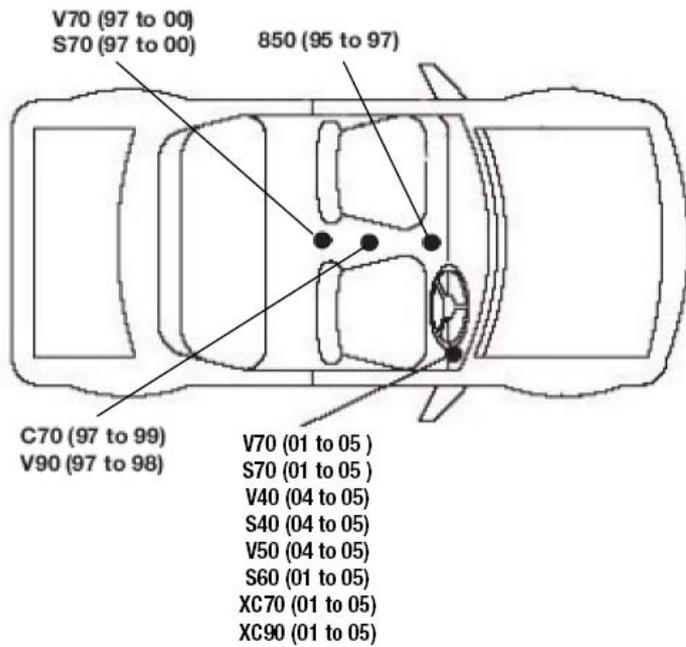

Application List



Volvo SERVICE RESET

850	96 - 98	P/D	All	96 - 98	All	Instruments
S40	96 - 04	P/D	All	96 - 04	All	Instruments
V40	96 - 04	P/D	All	96 - 04	All	Instruments
S40	04 - 05	P/D	All	04 - 05	All	Driver Information Module
V40	04 - 05	P/D	All	04 - 05	All	Driver Information Module
V50	04 - 05	P/D	All	04 - 05	All	Driver Information Module
S60	01 - 05	P/D	All	01 - 05	All	Driver Information Module
S70	97 - 98	P/D	All	97 - 98	All	Instruments
V70	97 - 98	P/D	All	97 - 98	All	Instruments
S70	98 - 00	P/D	All	98 - 00	All	Combi
V70	98 - 00	P/D	All	98 - 00	All	Combi
S70	01 - 05	P/D	All	01 - 05	All	Driver Information Module
V70	01 - 05	P/D	All	01 - 05	All	Driver Information Module
S80	01 - 05	P/D	All	01 - 05	All	Driver Information Module
XC70	01 - 05	P/D	All	01 - 05	All	Driver Information Module
XC90	03 - 05	P/D	All	03 - 05	All	Driver Information Module

Please return your Service Reset tool to:

SP Diagnostics
PO BOX 3467
Chippenham
Wiltshire
SN15 9FH

Please fill in the following details:

Product serial number _____

Customer Name: _____

Business Name: _____

Address: _____

Post Code: _____

Contact Number: _____

Email: _____

SP Diagnostics

PO BOX 3467, Chippenham, Wiltshire, SN15 9FH, UK

Sales & Customer Services: + 44 (0)845 6016510

Facsimile: + 44 (0)8700 941753

Email: sales@spdiagnostics.com

www.spdiagnostics.com